# GB HDW 1011WG; HDW 1011BG

# PROGRAMME CHART

**A. Programme buttons**
**B. Options buttons**
**C. “Temperature” modifier**
**D. “Spin speed” modifier**
**E. “Rinse options” modifier**
**F. “Soil level” modifier**
**G. “Start” button**
**H. Programme sequence indicator**
**I. Remaining time display**
**J. “Start delay” button**
**K. “Pause/Reset” button**
**L. “Favourites” button**
**M. “Child lock” indication**
**N. “Door locked” indication**
**O. “Add a garment” indication**




**When you select an option an indicator lights up.**
**If an option is not recommended for the selected programme the indicator will not light and a warning sound advises that this option is not possible.**
**If an option is selected after the programme has started a sound will indicate that it is not possible to select it at this stage.**

❇ : optional / yes: dosing required.

| Programme | Care labels | Type of wash/Notes<br>*- For temperature selection, respect the manufacturer's recommendations on the care label.* | Max. Load<br>kg | Detergents and additives<br>Pre-wash I | Main wash II | Softener | Special Options<br>Start delay | Pre-wash | Stain treat | Eco | Intensive spin | Spin Speed<br>max. | Tempe-rature °C<br>max. |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Sanitization cycle | 95 | For heavily soiled colourfast cotton which needs sanitization.<br>This programme complies to the UK Care Standard Act 2000 (CSA) Standard 26. | 10.0 | ❇ | Yes | ❇ | ❇ | ❇ | ❇ | — | ❇ | 1100 | Max. |
| Big Items | 95 60 40 30 | Blankets made of synthetic fibres, bedcovers filled with polyester or other artificial fibres, sleeping bags, bathmats and similar items. | 3.0 | ❇ | Yes | ❇ | ❇ | ❇ | — | — | — | 900 | 40 |
| White Cotton | 60 40 30 | For white cotton loads which you would like to bleach. An additional rinse provides optimal rinse performance to avoid chlorine residues on your laundry. | 10.0 | ❇ | Yes | ❇ | ❇ | ❇ | ❇ | ❇ | ❇ | 1100 | 60 |
| Heavy Duty | 60 40 30 | For normally soiled, sturdy and colourfast cotton. Use Stain Treat option for optimal removal of organic stains like blood, egg yolk etc. | 10.0 | ❇ | Yes | ❇ | ❇ | ❇ | ❇ | ❇ | ❇ | 1100 | 60 |
| Normal / Casual | 60 50 40 30 | For no-iron fabrics such as sport shirts, permanent press blends, cotton and linens. | 4.0 | ❇ | Yes | ❇ | ❇ | ❇ | ❇ | — | ❇ | 900 | 60 |
| Quick wash | 60 50 40 30 | For lightly soiled overalls and sports wear made of cotton, polyester, polyamide and blends with cotton. | 4.0 | — | Yes | ❇ | ❇ | — | — | — | ❇ | 1100 | 40 |
| Kids wear | 60 40 30 | For normally soiled kids garments made of cotton.<br>*If heavily soiled, select “Prewash” option.* | 7.0 | ❇ | Yes | ❇ | ❇ | ❇ | ❇ | — | ❇ | 1100 | 60 |
| Handwash / Wool | WOOLMARK | Textiles made of linen, wool and viscose marked as “handwashable”, as well as wool garments marked as “machine washable”. | 3.0 | — | Yes | ❇ | ❇ | — | — | — | — | 300 | 40 |
| Silk / Delicates | 40 30 | For washable silk and fine curtains, delicate dresses, skirts, shirts and blouses.<br>*Check care label instructions to make sure that garment is identified as machine washable.* | 3.0 | — | Yes | ❇ | ❇ | — | — | — | — | 0 | 40 |
| Rinse & Spin | — | *For a rinse and an extra high speed spin. If you wish you can reduce the speed.* | 10.0 | — | — | ❇ | ❇ | — | — | — | ❇ | 1100 | 40 |
| Drain & Spin | — | *For draining the washer with an additional extra high spin speed. If you wish you can reduce the speed.* | 10.0 | — | — | — | ❇ | — | — | — | ❇ | 1100 | — |

Whirlpool is a registered trademark of Whirlpool USA

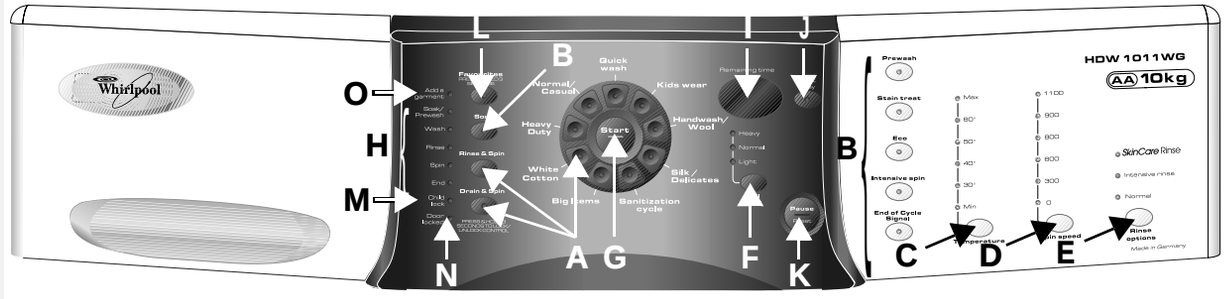**5019 301 15210**

## CONSUMPTION DATA

| Programme | Temperature (°C) | Max. load (kg) | Water (l) | Energy (kWh) | Approximate programme duration* (hours : minutes) |
|---|---|---|---|---|---|
| Sanitization cycle | 95 | 10.0 | 100 | 2.00 | 1:35 |
| Big Items | 40 | 3.0 | 80 | 0.90 | 1:05 |
| White Cotton | 60 | 10.0 | 120 | 1.72 | 1:30 |
| Heavy Duty ** | 60 | 10.0 | 85 | 1.80 | 2:30 |
| Normal / Casual | 60 | 4.0 | 78 | 1.00 | 1:00 |
| Quick wash | 40 | 4.0 | 65 | 0.50 | 0:50 |
| Kids wear | 40 | 7.0 | 120 | 0.90 | 1:35 |
| Handwash / Wool | 40 | 3.0 | 70 | 0.80 | 0:35 |
| Silk / Delicates | 40 | 3.0 | 70 | 0.80 | 0:30 |

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table dependent on the water supply pressure and temperature, the load and the type of wash.

* The remaining time indicator can deviate from the values in the table, because it takes into account the household conditions applicable at that time. The Sanitary cycle complies to the UK Care Standard Act 2000 (CSA) Standard 26, therefore rest time indication might vary if hot water supply is below 60°C.

** When tested to 5/N25 2040 2:2000.

## ADD DETERGENT, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add the detergent as described in this programme chart or in the chapter “Detergent and Additives” of the Instructions for Use.

1. Press the desired wash cycle.
2. The remaining time display shows the duration of the chosen programme (in hours and minutes) and the lamp of the wash cycle button lights up.
3. The programme sequence, water temperature and options indicators corresponding to the selected programme light up.
   The recommendations can be altered by pressing the modifiers and the options buttons.

## SELECT ANY DESIRED OPTION AND MODIFIER

**Selecting any option the indication lights up. When the combination of programme, additional options and modifiers is not possible, the indication lights switch off automatically and a signal sounds.**

**“Prewash”**
- For heavily soiled laundry.
- The cycle time increases by approx. 15 minutes.
- Add detergent to the Prewash and Main Wash dispenser compartments.
- When using the Prewash compartment, do not use liquid detergent in the Main Wash compartment: use powder detergent for the main wash cycle.
- “Prewash” and “Soak” options cannot be selected in the same cycle.

**“Stain Treat”**
- For heavily soiled laundry.
- Warm water fill for optimal organic soil removal and heat to high temperature.

**“Eco”**
- With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing results and even lower energy consumption is achieved.

**“Soak”**
- For heavily soiled laundry with set-in stains.
- The cycle time increases by approx. 30 minutes.
- Use with a wash cycle:
  Select the desired wash cycle and “Soak” option, add detergent to the Prewash and the Main Wash dispenser compartments; press the **“Start”** button. When using the Prewash compartment, do not use liquid detergent in the Main Wash compartment: use powder detergent for the main wash cycle.
- Use without a wash cycle:
  Select first “Drain & Spin” or “Rinse & Spin” and then “Soak” option; choose the desired soak temperature, add detergent to the Prewash compartment and press the **“Start”** button.
- “Prewash” and “Soak” options cannot be selected in the same cycle.

**“Intensive spin”**
- This option is useful for adding an additional spin to any cycle to improve the “fluff” of your laundry, to reduce drying time and to save energy.

**“End of cycle signal”**
- Press the button if you want the end of the wash programme to be indicated by an acoustic signal.

**“Modifiers”**
Preset cycle settings of water temperature, spin speed, rinse options and soil level can be changed; modify the settings by pressing the respective buttons. - Changing the soil level leads to different programme durations.

## START DELAY

The “Start delay” allows to run the machine at the consumer’s convenience, for example at night when electricity may be cheaper.
- Select programme, modifier and options.
- Press the “Start delay” button to select the delay time by 1 to 10 hours;
- Press the **“Start”** button.
- The time delay indication disappears when the programme starts and it is replaced by the remaining time.
- The number of hours preselected can later be reduced pressing again the “Start delay” button.

**To cancel the “Start delay”.**
- Press the “Pause/Reset” button once.
- Press the “Start delay” button up to 00 h in the display.

## SAVE YOUR FAVOURITE PROGRAMME

The “Favourites” button offers the possibility to save a combination of programme, options and modifier settings which you use frequently.
- Chose the desired programme, options and modifier settings.
- Press and hold the “Favourites” button for at least 3 seconds; the programme combination is saved now.

Next time you want to start your “Favourite” programme, just push “Favourites” and then the **“Start”** button.
If you want to replace the saved programme by another one: select the new programme and any options and modifier settings. Press and hold the “Favourites” button for at least 3 seconds; the previously saved programme will be replaced by the new one.

## PROGRAMME START

Turn on the tap(s) and press the **“Start”** button.
The indicator lamps show the sequence reached in the programme. After starting the programme, the sequence indication runs from top to bottom through “Soak/Prewash”, “Wash”, “Rinse”, “Spin” and “End of cycle”.
When a sequence of the programme is finished the corresponding lamp goes out.

## ADD A GARMENT

After programme start and while the “Add a garment” lamp is on you can still add a garment.
Press the “Pause/Reset” button **once**. After few seconds the door will be unlocked and you can add the garment. Close the door and press the **“Start”** button. The programme will run again from the point where it was interrupted.

## DOOR LOCK

After each programme start the door is locked and approx. 0.5 l of water is rinsed in. The door is unlocked for a few seconds. The door is then locked until the end of the programme. When the door is locked, the “door locked” light is on. Detailed information can be found in the Instructions for Use.

## PROGRAMME END

- The time remaining is “0:00” and the “End” light of the programme sequence indicator is on.

1. Take out the load.
2. Turn the tap off and leave the door ajar to allow the drum to dry.
   The machine switches off automatically after some time; even if it is already off, the door can still be opened.

## CHANGE THE PROGRAMME, TEMPERATURE, OPTIONS AFTER PROGRAMME START

1. Press the “Pause/Reset” button **once** to interrupt the programme. The light flashes.
2. Select the new programme with temperature, any options and modifier if you want.
3. Press the **“Start”** button. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL A PROGRAMME BEFORE THE END

Press the “Pause/Reset” button **twice**. Any existing water is drained out before the door can be opened.

## CHILD LOCK

The “Child lock” prevents unintended changes during a running programme. When the “Child lock” light is on, all buttons are disabled. You can lock the buttons while a programme is running.

**To lock the buttons:**
Select and hold “Drain & Spin” for 3 seconds - the “Child lock” light is on.

**To unlock the buttons:**
Select and hold “Drain & Spin” for 3 seconds - the “Child lock” light goes off.

Whirlpool is a registered trademark of Whirlpool USA

5019 301 15210

# HOT / COLD FILL INSTRUCTION

**Please observe that both inlet valves (red and white) of the washing machine have to be connected to the water supply. There are two alternative ways of doing this:**

## Connect hot and cold water supply (Fig.1):

1. Fix the water inlet hose with the red stripe at the red valve of the washing machine and at the hot water tap.
2. Fix the water inlet hose with the blue stripe at the white valve of the washing machine and at the cold water tap.

To get the optimum performance you should use both the hot and cold water supplies.

**Make sure:**

a) The connections are tight, but do not over tighten by using a tool.

b) Do not invert their position (for example: cold fill into hot inlet valve and viceversa).

c) And see instruction for use “Connect the water supply hose”.

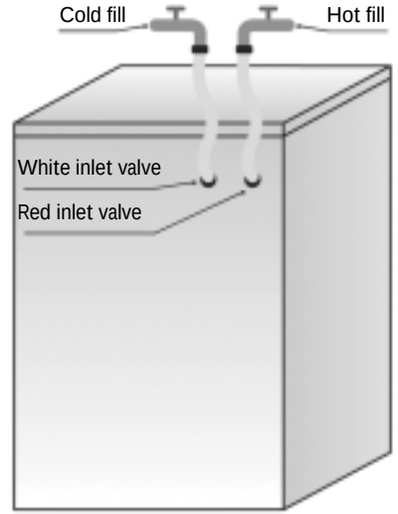


**Fig.1**

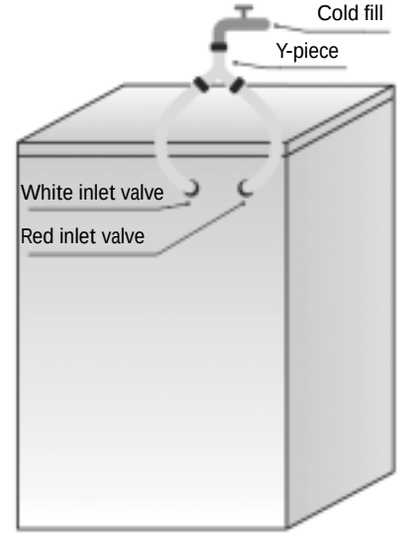


**Fig.2**

**Do not allow children to operate, crawl on, near or inside your washer. Note that during wash cycles, the surface temperature of the porthole door may increase.**
**Close supervision of children is necessary when the appliance is used near children.**

## Connect cold water supply only (Fig. 2):

1. You need a Y-piece connector, which can be ordered via our Service Organization (see Instructions for Use) or purchased in a specialized hydraulic component store.
2. Fix the Y-piece connector to the cold fill tap.
3. Connect the two inlet valves on the rear part of the machine to the Y-piece connector. Fix the hose with the red stripe at the red valve, and the hose with the blue stripe at the white valve of the washing machine.

**Make sure all connections are tightly fixed.**
**Programme times might differ from the times indicated in the Consumption Data table if the washing machine is connected to cold fill only.**

Whirlpool is a registered trademark of Whirlpool USA

**5019 301 15210**